 


TROUBLESHOOTING

Problem	Solution
The Steam Mop is not emitting steam	<p>Check to make sure the Steamer is positioned correctly in the Mop Cradle (page 4)</p> <p>Check to make sure the Steamer is plugged into a polarized outlet</p> <p>If the Steamer water tank is empty, fill with water (page 6)</p> <p>Push down on the handle as you are pushing the mop forward (page 7)</p>
The Hand-Held Steamer is not emitting steam	<p>Check to make sure the Steamer is plugged into a polarized outlet</p> <p>If the Steamer water tank is empty, fill with water (page 6)</p>

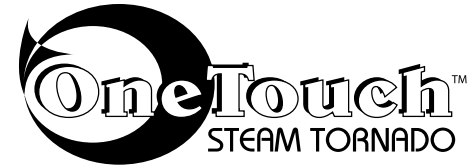

For more information, visit our web site at
www.onetouchhelp.com

2-IN-1 STEAM CLEANER

USER MANUAL

Patent Pending
Printed in China

Model No.: 90001

SAVE THESE INSTRUCTIONS

The OneTouch™ Steam Tornado is intended for household use only. Read the following instructions before using for the first time.

PRODUCT INFORMATION

The lightweight Steam Tornado is an all-in-one household steam cleaning tool. It is a powerful steam mop *and* a detachable hand-held steam cleaner – all in one! This patented system uses the proven power of steam to safely clean, sanitize and deodorize better than any harmful chemical cleaner that leaves behind a sticky or gritty residue. The Steam Tornado removes dirt and stains, mold, mildew, germs, spores, and bacteria using only tap water and no chemicals, eliminating your exposure to toxins and preventing harm to the environment.


The Steam Tornado will clean a variety of flooring, including vinyl, linoleum, stone, ceramic, laminate, and sealed hardwoods. Use the hand-held Steam Tornado on counter tops, sinks and drains, grills, ovens, microwaves, showers, toilets, and high chairs. The vapor system also allows you to sanitize and deodorize upholstered furniture, mattresses, pillows, and draperies.

TABLE OF CONTENTS

Safety Instructions	3
Product Parts	3
Mop Assembly	4
Hand-Held Steamer	5
Getting Started	6
Operation: Steam Mop	7
Operation: Hand-Held Steamer	7
Cleaning and Care	7
Specifications	7
Troubleshooting	8

SAFETY INSTRUCTIONS



- **CAUTION: Steam is HOT! Avoid direct skin contact with the steam and the Steamer Nozzle. Allow the Mop Pad to cool completely before removing. Allow the Steamer Nozzle to cool completely before touching.**
- **CAUTION: Close supervision is necessary when your Steam Tornado is used around children. The Steam Tornado should NOT be used by children.**
- **CAUTION: To reduce risk of fire, do not operate unattended.**
- **CAUTION: To provide continued protection against risk of electric shock, connect to properly grounded outlets only.**
- **Unplug the Steam Tornado when not in use.**
- **Do not immerse in water.**
- **Read all instructions carefully before using this product.**
- **FOR INDOOR USE ONLY.**
- **SAVE THESE INSTRUCTIONS.**

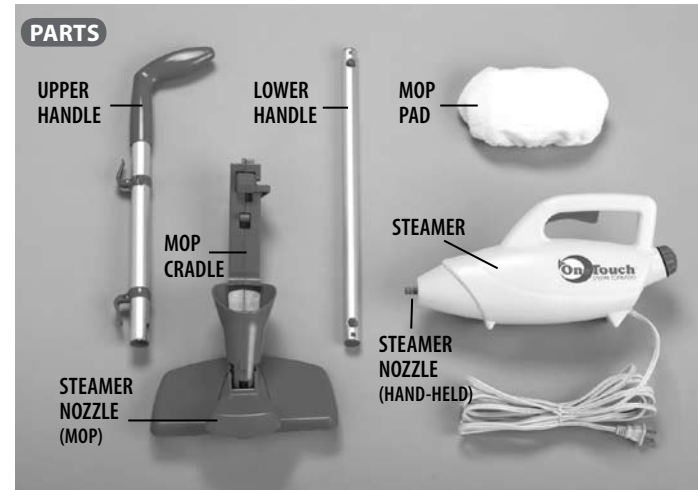

***Better Than a Steam Mop –
Better Than a Hand-Held Steamer***

MOP ASSEMBLY


1. Begin by assembling the Lower Handle to the Mop Cradle by orienting the button on the Lower Handle to the back of the Mop Cradle. Insert the Lower Handle into the Cradle, while pressing the button down until it is fully engaged.
2. Assemble the other end of the Lower Handle to the Upper Handle by pressing the button and sliding the Upper Handle over the Lower. Align button and hold to ensure full engagement.
3. Attach the Steamer by simply aligning into the Cradle and moving backwards until engaged.
4. Slip the Mop Pad over the Mop Cradle end. The Mop Pad should be aligned with the straight edge facing the front so that the elastic band is under the Steamer Nozzle, making certain the Mop Pad does not block the steam (see illustration below).

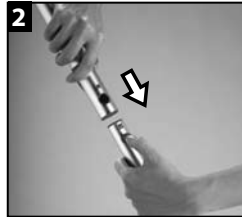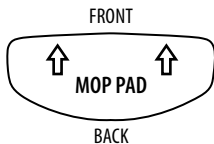

HAND-HELD STEAMER

To Detach Steamer

1. Locate lever on Lower Handle, and lift up to disengage the Steamer. Pull the Steamer up and out of the Cradle for hand-held use.
2. To reattach the Steamer to the Mop Handle, simply align into the Cradle and move backwards until engaged (3).

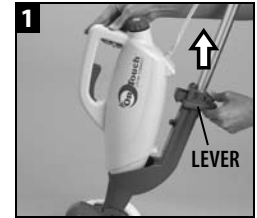

GETTING STARTED

Add Water

Locate the water tank fill cap near the base of the Steamer handle. To remove the cap, turn counterclockwise. Once the cap is removed, fill the Steamer with tap water until it reaches the bottom of the mesh filter (approximately 2 cups). Do not remove mesh filter.

IMPORTANT: Do not fill with anything other than water. Do not add chemicals or detergents.

Steam Mop – Replace the cap by turning clockwise. Tighten the cap; insert the Steamer in the Mop Cradle (page 4, step 3) and plug it in to heat the water.

The RED display light will illuminate when the Mop is plugged in. The display light will turn off when the Mop is ready for use.

Hand-Held Steamer – Replace the cap by turning clockwise. Tighten the cap and plug it in to heat the water.

The RED display light will illuminate when the Hand-Held is plugged in. The display light will turn off when the Hand-Held is ready for use.



OPERATION

Steam Mop


To operate the Steam Mop, push down on the handle as you push the Mop forward along the floor. Release the handle to stop the flow of steam. For stubborn dirt and scuff marks, move the Mop more slowly to loosen the dirt without scrubbing. A full tank of water lasts 40 to 50 minutes.

Hand-Held Steamer

To operate the Hand-Held Steamer, aim the nozzle towards the surface you want to clean and pump the trigger lever on the underside of the Steamer Handle to release steam.

To dry the surface, wipe with a clean, absorbent cloth. A full tank of water lasts 40 to 50 minutes.

CAUTION: Avoid direct skin contact with the steam and the Steamer Nozzle.

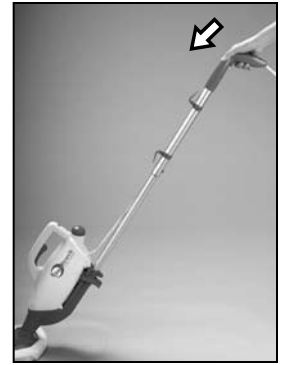

CLEANING AND CARE

- The microfiber cloth Mop Pad is reusable and machine washable.
- The Steamer, Handle and Mop Cradle wipe clean with a damp cloth.

SPECIFICATIONS

Voltage: 120V/60Hz

Power: 1300W

Thermostat: 340° F (170° C)

Fuse: 420° F (215° C)

Power Cord: 16AWG*2C UL

Water Tank Capacity: Approx. 2 Cups (16 oz. / 0.5 liters)